

Disassembly gear motor from deck side.



When disassembly the gear motor and the shaft is stuck in the gear box, this is how you can disassembly from deck side. Shaft get stuck if the installer has forgot to put grease on shaft when installing, or lack of maintenance

Remove al parts on shaft.
Remove clip part 12 ref to user manual.
Spray shaft with CRC565, WD40 or similar products.



Low profile model:
Replace gypsy cap part 19, tighten normally.
Capstan model:
Replace capstan screw part 2, tighten normally.
Lay a wood piece between the gypsy cap / capstan screw so you don't damage when using a hammer.
Use the hammer to pushing the shaft down.

Note!
Do not use the hammer direct on the shaft, this will damage the treads on shaft.



When the shaft is out of the deck unit.

Use the hammer to push the shaft out of the gear box, use some wood between the hammer and shaft so you don't damage the shaft.