

90503 Solenoid repair




Open solenoid, remove the 4 screws in corner.
Flip around, lift the upper part off.




If contact plates are burned or corroded, clean with fine sand paper.
Contact surface are where the metal plates have contact.

Please check that all parts are in correct position,
as shown on picture.

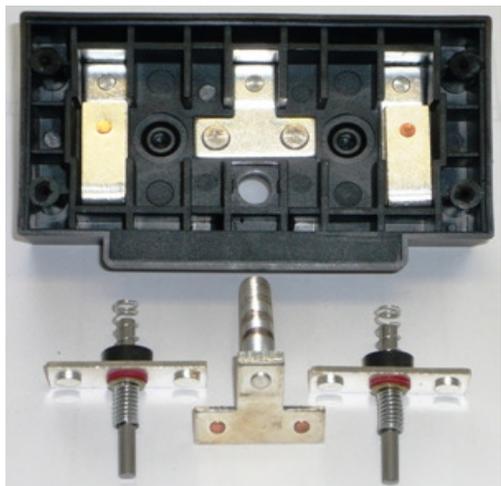

It is also possible and remove the bolt and gain better access.
At the back mounting, check that all parts are in correct position.
Tighten the nuts on the top side and control that all parts
remain in correct position.

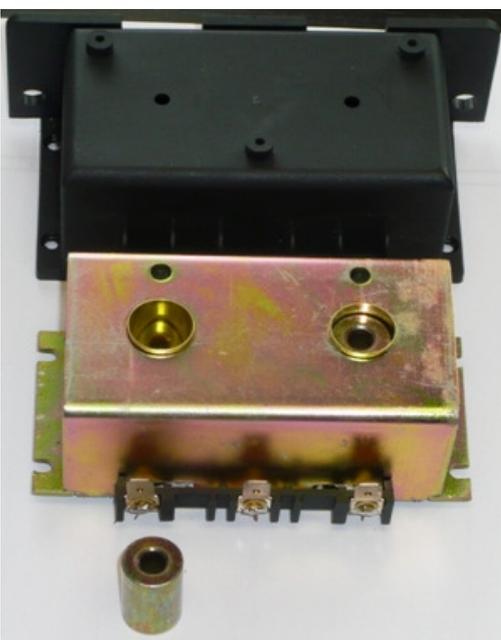

If the solenoid is water damaged.
Remove the piston from the cylinder and clean with sand paper.
Piston is to go freely in the cylinder.
Do not use oil on the piston, piston should be dry.
Notes witch way the piston is mounted in the cylinder.

 Solenoid should be mounted on a dry place.
Do not mount the solenoid inside the anchor locker.