

## Change gear oil on gear box, repair oil leakage.



Remove 4 allan head bolts.



Use a knife and hammer gently to lift the flang up a bit from main gerbox housing.



Use 2 knives or flat screw drivers to push the flang of.  
Do the same with the cover on the other side.  
Finish one side before you take the next one.



Fill with gear oil EP90 or simmilar. Fill up just over the brass chrown wheel.  
Apply sealant on flang / cover over the seal ring.  
Mount flang / cover back on.  
Push flang / cover down by using your hands or use gently a plastic hammer or wood hammer.